#### I. INTRODUCTION

#### Thank you for purchasing a Ki Mobility wheelchair!

## **△** WARNING △

WARNING: Do not use this without first reading this entire manual. Use without first reading this entire manual could result in serious injury to the user and/or attendant.

Ki Mobility recommends training by an Assistive Technology Professional (ATP) or other competent clinical or technical professional in the safe use of this chair prior to use.

If you have any questions or concerns about any aspect of this wheelchair, this manual or the service provided, do not hesitate to contact your authorized supplier, an authorized representative or Ki Mobility. Ki Mobility can be reached at:

(1)715-254-0991



Ki Mobility 5201 Woodward Drive Stevens Point, WI 54481 U.S.A



www.kimobility.com (Includes Dealer locator and access to printed information)

Or via our Authorized EU Representative:





Etac Supply Center AB Långgatan 12 33233 Anderstorp Sweden

### **II. TABLE OF CONTENTS**

INTRODUCTION

A. Intended Use B. Indications for Use C. Your Safety D. Signal Words E. Serial Number Identification F. Symbol Glossary. G. General Warnings and Cautions. H. Positioning Belts or Harnesses. I. Riding Your Wheelchair. J. Power Drives K. Your Wheelchair and the Environment L. Modifying your Wheelchair. M. Wheelchair Stability N. Attermarket Seating M. Wheelchair Stability N. Attermarket Seating M. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs B. Transfers. C. Transit Use D. Cushion Use E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only S. Tit Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock D. Transie B. Transit Wheels C. Removable Seat Pan	II. III.		LE OF CONTENTS	
B. Indications for Use. C. Your Safety. D. Signal Words. E. Serial Number Identification F. Symbol Glossary. G. General Warnings and Cautions. H. Positioning Belts or Hamesses. I. Riding Your Wheelchair. J. Power Drives K. Your Wheelchair and the Environment L. Modifying your Wheelchair. M. Wheelchair Stability. N. Aftermarket Seating.  // WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm H. Tubular Flip Up Armrest. I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. M. Pro Elevating Leg Rest. D. Packrest. D. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces X. Oxygen Tank Holder A. Cane and Crutch Holder BB. Transit Wheels. C. Storage. D. Disposal. U. WARANTY  U. WARANTY  U. WARANTY  U. Markens.  I. WARANTY  I House Services. I Roughes Southions.  I. WARANTY  U. Ware Locks. I. WARANTY  II. WARANTY  II. WARANTY  II. WARANTY  III. MARANTY  III. WARANTY  III. WARANTY  III. WARANTY  III. WARANTY  III. Markens. III. J. A. Symptoms and Solutions. III. WARANTY				,
C. Your Safety D. Signal Words E. Serial Number Identification F. Symbol Glossary G. General Warmings and Cautions H. Positioning Belts or Harnesses I. Riding Your Wheelchair J. Power Drives K. Your Wheelchair and the Environment L. Modifying your Wheelchair M. Wheelchair Stability N. Aftermarket Seating MHELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs B. Transfers C. Transit Use D. Cushion Use E. Transporting of Unoccupied Wheelchair F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch L. Extension Tubes M. Elevating Leg Rest O. Pediatric Elevating Leg Rest O. Pediatric Elevating Leg Rest P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips V. Contact Surfaces X. Oxygen Tank Holder P. Hemi Wheel Lock Z. Drum Brake A. Cane and Crutch Holder B. Cane and Surfaces MAINTENANCE AND CARE MAINTENANCE AND COLUMN MARANTY  I. WARRANTY				
D. Signal Words. E. Serial Number Identification F. Symbol Glossary. G. General Warnings and Cautions. H. Positioning Belts or Harnesses. I. Riding Your Wheelchair J. Power Drives. K. Your Wheelchair and the Environment L. Modifying your Wheelchair M. Wheelchair Stability. N. Aftermarket Seating. M. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm. H. Tubular Filip Up Armrest. I. Angle Adj. Locking Extendable Filip Up Armrest. J. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest. O. Pediatric Elevating Leg Rest. O. Adjusting/installing Strap - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. V. Contact Surfaces. A. Cean and Crutch Holder. BB. Transit Wheels. C. Storage. D. Disposal D. Symptoms and Solutions II. WARRANTY  II. WARRANTY  II. WARRANTY  III. WARRANTY				
E. Serial Number Identification F. Symbol Glossary G. General Warnings and Cautions H. Positioning Beits or Harnesses I. Riding Your Wheelchair J. Power Drives K. Your Wheelchair and the Environment L. Modifying your Wheelchair M. Wheelchair Stability N. A fitermarket Seating J. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs B. Transfers C. Transit Use B. Transfors C. Transit Use E. Transporting of Unoccupied Wheelchair F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest O. Pediatric Elevating Leg Rest P. Backrest O. Pediatric Elevating Leg Rest P. Backrest O. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only R. Folding and Crutch Holder R. Folding Sarpa - Folding Chair Only R. Folding Sarpa - Folding Chair - Folding Chair Only R. Folding Sarpa - Folding Chair - Folding Chair Only R. Folding S				
F. Symbol Glossary. G. General Warnings and Cautions. H. Positioning Belts or Harnesses. I. Riding Your Wheelchair J. Power Drives. K. Your Wheelchair and the Environment L. Modifying your Wheelchair M. Wheelchair Stability. N. Aftermarket Seating. M. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm. H. Tubular Filp Up Armrest. I. Angle Adj. Locking Extendable Filip Up Armrest. J. Swing Away Hangers K. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest. D. Pediatric Elevating Leg Rest. D. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels U. Wheel Lock. V. Anti-Tips. W. Contact Surfaces. X. Coxygen Tank Holder Hen Wheel Lock. Z. Drum Brake A. Cane and Crutch Holder. BB. Transit Wheels C. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions III. WARRANTY				
G. General Warnings and Cautions H. Positioning Belts or Harnesses I. Riding Your Wheelchair J. Power Drives K. Your Wheelchair and the Environment L. Modifying your Wheelchair M. Wheelchair Stability N. A Aftermarket Seating J. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs B. Transfers C. Transit Use D. Cushion Use E. Transporting of Unoccupied Wheelchair F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest O. Pediatric Elevating Leg Rest O. Pediatric Elevating Cap Rest O. Packness Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock C. Removable Seat Pan Maintenance Table B. Transit Wheels C. Removable Seat Pan Maintenance Table B. Cleaning C. Storage D. Disposal. II. TROUBLESHOOTING A. WARRANTY				
H. Positioning Belts or Harnesses. I. Riding Your Wheelchair. J. Power Drives. K. Your Wheelchair and the Environment. L. Modifying your Wheelchair M. Wheelchair Stability. N. Aftermarket Seating.  /**MHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm. H. Tubular Pilp Up Armrest. I. Angle Adj. Locking Extendable Pilp Up Armrest. J. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks V. Anti-Tips. W. Contact Surfaces. X. Oxygen Tank Holder. Y. Hemi Wheel Lock Z. Drum Brake. AA. Cane and Crutch Holder. BB. Transit Wheels. C. Removable Seat Pan. MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal. II. TROUBLESHOOTING A. Symptoms and Solutions. III. WARRANTY				
I. Riding Your Wheelchair J. Power Drives K. Your Wheelchair and the Environment L. Modifying your Wheelchair M. Wheelchair Stability N. Aftermarket Seating N. Aftermarket Seating J. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs B. Transfers. C. Transit Use D. Cushion Use E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake A. Cane and Crutch Holder BB. Transit Wheels C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions III. WARRANTY				
J. Power Drives K. Your Wheelchair and the Environment L. Modifying your Wheelchair M. Wheelchair Stability N. Aftermarket Seating J. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs B. Transfers. C. Transit Use D. Cushion Use E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest J. Swing Away Hangers K. Swing Away Hangers K. Swing Away Hangers M. Elevating Leg Rest O. Pediatric Elevating Leg Rest. O. Pediatric Elevating Leg Rest P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only S. Tilt Mechanism. T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheels CC. Removable Seat Pan MININTENANCE AND CARE M. Maintenance Table. B. Cleaning C. Storage D. Disposal II. TROUBLESHOOTING M. WARRANTY				
K. Your Wheelchair and the Environment L. Modifying your Wheelchair. M. Wheelchair Stability. N. Aftermarket Seating.  //. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm. H. Tubular Flip Up Armrest. I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest O. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces X. Oxygen Tank Holder. Y. Hemi Wheel Lock D. Drum Brake. AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan. MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal. II. TROUBLESHOOTING III. WARRANTY				
L. Modifying your Wheelchair M. Wheelchair Stability. N. Aftermarket Seating J. WHEELCHAIR USE & CONFIGURATION A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest. P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan R. Maintrenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions III. WARRANTY				
M. Wheelchair Stability. N. Aftermarket Seating.  7. WHEELCHAIR USE & CONFIGURATION  A. Curbs, Steps and Stairs. B. Transfers C. Transit Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm H. Tubular Flip Up Armrest. I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism. T. Rear Wheels U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces. X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan  MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions. II. WARRANTY		K.		
N. Aftermarket Seating  MEELCHAIR USE & CONFIGURATION  A. Curbs, Steps and Stairs  B. Transfers  C. Transit Use  D. Cushion Use  E. Transporting of Unoccupied Wheelchair.  F. Your Liberty & Its Parts  G. Height Adjustable T-Arm  H. Tubular Flip Up Armrest  I. Angle Adj. Locking Extendable Flip Up Armrest  J. Swing Away Hangers  K. Swing Away Hangers with 4-Way Latch  L. Extension Tubes  Bevating Leg Rest  N. Pro Elevating Leg Rest  O. Pediatric Elevating Leg Rest  P. Backrest  Q. Adjusting/Installing Strap - Folding Chair Only  R. Folding and Unfolding Chair - Folding Chair Only  S. Titt Mechanism  T. Rear Wheels  U. Wheel Locks  V. Anti-Tips  W. Contact Surfaces  X. Oxygen Tank Holder  Hemi Wheel Lock  Z. Drum Brake  AA. Cane and Crutch Holder  BB. Transit Wheels  C. Removable Seat Pan  MAINTENANCE AND CARE  A. Maintenance Table  B. Cleaning  C. Storage  D. Disposal  I. TROUBLESHOOTING  A. Symptoms and Solutions		L.	Modifying your Wheelchair	1
A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm H. Tubular Flip Up Armrest. I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces. X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake. AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan  Maintenance Table. B. Cleaning. C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions. II. WARRANTY		M.	Wheelchair Stability	1
A. Curbs, Steps and Stairs. B. Transfers. C. Transit Use. D. Cushion Use. E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm H. Tubular Flip Up Armrest. I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. O. Pediatric Flevating Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels U. Wheel Locks. V. Anti-Tips W. Contact Surfaces. X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake. AA. Cane and Crutch Holder. BB. Transit Wheels CC. Removable Seat Pan  MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.		N.		
B. Transfers. C. Transit Use D. Cushion Use E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest. P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions	V.			
C. Transit Use D. Cushion Use E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal. T. TROUBLESHOOTING A. Symptoms and Solutions II. WARRANTY				
D. Cushion Use E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism. T. Rear Wheels U. Wheel Locks. V. Anti-Tips W. Contact Surfaces. X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan  MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage D. Disposal.  I. TROUBLESHOOTING A. Symptoms and Solutions  III. WARRANTY				
E. Transporting of Unoccupied Wheelchair. F. Your Liberty & Its Parts. G. Height Adjustable T-Arm. H. Tubular Flip Up Armrest. I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan.  MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal TTROUBLESHOOTING A. Symptoms and Solutions.				
F. Your Liberty & Its Parts G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips. W. Contact Surfaces. X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.				
G. Height Adjustable T-Arm H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest. P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.				
H. Tubular Flip Up Armrest I. Angle Adj. Locking Extendable Flip Up Armrest. J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces. X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.		F.		
I. Angle Adj. Locking Extendable Flip Up Armrest.  J. Swing Away Hangers.  K. Swing Away Hangers with 4-Way Latch.  L. Extension Tubes.  M. Elevating Leg Rest.  N. Pro Elevating Leg Rest.  O. Pediatric Elevating Leg Rest.  P. Backrest.  Q. Adjusting/Installing Strap - Folding Chair Only.  R. Folding and Unfolding Chair - Folding Chair Only.  S. Tilt Mechanism.  T. Rear Wheels.  U. Wheel Locks.  V. Anti-Tips.  W. Contact Surfaces.  X. Oxygen Tank Holder.  Y. Hemi Wheel Lock.  Z. Drum Brake.  AA. Cane and Crutch Holder.  BB. Transit Wheels.  CC. Removable Seat Pan.  MAINTENANCE AND CARE  A. Maintenance Table.  B. Cleaning.  C. Storage.  D. Disposal.  I. TROUBLESHOOTING  A. Symptoms and Solutions.		G.		
J. Swing Away Hangers. K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces. X. Oxygen Tank Holder. Y. Hemi Wheel Lock Z. Drum Brake. AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan. MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning. C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.		Н.		
K. Swing Away Hangers with 4-Way Latch. L. Extension Tubes. M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake. AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan. MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning. C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.		I.	Angle Adj. Locking Extendable Flip Up Armrest	
L. Extension Tubes M. Elevating Leg Rest N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions		J.		
M. Elevating Leg Rest. N. Pro Elevating Leg Rest. O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips W. Contact Surfaces. X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels. CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning. C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.		K.	Swing Away Hangers with 4-Way Latch	2
N. Pro Elevating Leg Rest O. Pediatric Elevating Leg Rest P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism. T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions		L.	Extension Tubes	2
O. Pediatric Elevating Leg Rest. P. Backrest. Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake. AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan. MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning. C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.		M.	Elevating Leg Rest	2
O. Pediatric Elevating Leg Rest. P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only. R. Folding and Unfolding Chair - Folding Chair Only. S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder. BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions.		N.		
P. Backrest Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions		Ο.		
Q. Adjusting/Installing Strap - Folding Chair Only R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces. X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage D. Disposal. TROUBLESHOOTING A. Symptoms and Solutions II. WARRANTY		P.		
R. Folding and Unfolding Chair - Folding Chair Only S. Tilt Mechanism. T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal TROUBLESHOOTING A. Symptoms and Solutions		Q.	Adjusting/Installing Strap - Folding Chair Only	(
S. Tilt Mechanism. T. Rear Wheels. U. Wheel Locks. V. Anti-Tips. W. Contact Surfaces. X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels. CC. Removable Seat Pan CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning. C. Storage. D. Disposal. I. TROUBLESHOOTING A. Symptoms and Solutions.			Folding and Unfolding Chair - Folding Chair Only	
T. Rear Wheels U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions			Tilt Mechanism	
U. Wheel Locks V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions				
V. Anti-Tips W. Contact Surfaces X. Oxygen Tank Holder Y. Hemi Wheel Lock Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan MAINTENANCE AND CARE A. Maintenance Table B. Cleaning C. Storage D. Disposal TROUBLESHOOTING A. Symptoms and Solutions				
W. Contact Surfaces. X. Oxygen Tank Holder. Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder. BB. Transit Wheels. CC. Removable Seat Pan  MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning. C. Storage. D. Disposal.  I. TROUBLESHOOTING A. Symptoms and Solutions.				
X. Oxygen Tank Holder Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan  MAINTENANCE AND CARE A. Maintenance Table. B. Cleaning C. Storage. D. Disposal.  I. TROUBLESHOOTING A. Symptoms and Solutions		• •		
Y. Hemi Wheel Lock. Z. Drum Brake AA. Cane and Crutch Holder				
Z. Drum Brake  AA. Cane and Crutch Holder  BB. Transit Wheels.  CC. Removable Seat Pan  MAINTENANCE AND CARE  A. Maintenance Table.  B. Cleaning.  C. Storage.  D. Disposal.  I. TROUBLESHOOTING  A. Symptoms and Solutions.				
AA. Cane and Crutch Holder BB. Transit Wheels CC. Removable Seat Pan  MAINTENANCE AND CARE  A. Maintenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions				
BB. Transit Wheels. CC. Removable Seat Pan  MAINTENANCE AND CARE  A. Maintenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions				
CC. Removable Seat Pan  MAINTENANCE AND CARE  A. Maintenance Table B. Cleaning C. Storage D. Disposal I. TROUBLESHOOTING A. Symptoms and Solutions.				
MAINTENANCE AND CARE  A. Maintenance Table				
A. Maintenance Table				4
B. Cleaning	٠.			
C. Storage				
D. Disposal				
I. TROUBLESHOOTING A. Symptoms and Solutions				
A. Symptoms and Solutions				4
II. WARRANTY	i-		JBLESHOOTING	
	_			

#### A. Intended Use

The Ki Mobility Liberty manual wheelchair is intended to provide mobility to persons limited to a sitting position.

#### B. Indications for Use

The Ki Mobility Liberty manual wheelchair is a manually operated device with wheels that is intended to provide mobility to adults restricted to a sitting position.

#### C. Your Safety

NOTE: Contact Ki Mobility for information on safety recalls and notices.

Any serious adverse events or injuries related to the use of your wheelchair or its accessories must be reported immediately if the incident directly or indirectly leads to serious health decline or death of the user or other person. Report any serious events and/or injuries to Ki Mobility and, if required by local regulation, the competent health authority where the user and/or other person legally reside.

Do not use this wheelchair without first reading this entire manual. BEFORE riding, you should be trained in the safe use of this chair by an Assistive Technology Professional (ATP) or other competent clinical or technical professional. Ki Mobility manufactures many different wheelchairs that might meet your needs. The recognized best practice for selecting a wheelchair is to consult with an ATP or other competent technical professional and an experienced clinical professional such as a physical therapist, occupational therapist or physician. Final selection of the type of wheelchair, options and adjustments rests solely with you and your technical and clinical professionals. The options you choose, and the set-up and adjustment of the wheelchair have a direct impact on its performance, stability and its ability to meet your needs. Factors to consider that affect your safety and stability are:

- a. Your personal abilities and capabilities including strength, balance and coordination.
- b. The types of hazards and obstacles you might encounter during your day.
- c. The specific dimensions, options and set up. In particular, the seat height, seat depth, seat angle, back angle, size and position of the rear wheels and size and position of the front casters.

### D. Signal Words

Within this manual you will find what are referred to as "Signal" words. These words are used to identify and convey the severity of varying hazards. Before using this chair you, and each person who may assist you, should read this entire manual. Please note the Signal word and consider any notes, cautions or warnings. Make sure to follow all instructions and use your chair safely. The Signal word refers to a hazard or unsafe practice that may cause severe injury or death to you or to other persons. The "Warnings" are in three main categories, as follows:

NOTE – Note indicates a potentially hazardous situation which, if not avoided, could result in a decline in the performance of the chair or damage to your wheelchair.

### **⚠CAUTION⚠**

CAUTION: Caution indicates a potentially hazardous situation which, if not avoided, could result in damage to your wheelchair and injury to you.


### $\triangle$ warning $\triangle$

WARNING: Warning indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.

These signal words will be placed throughout the manual, where appropriate to highlight the hazardous situation. Refer to Section F. for hazardous situations that will apply to the general use of this wheelchair.

#### E. Serial Number Identification

The UDI (Unique Device Identifier) pictured is a representative sample. For information specific to your product check the UDI label located on your product as indicated in the figure below.

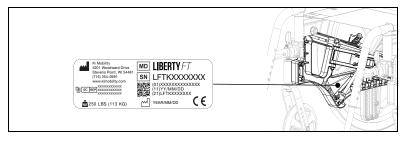

## F. Symbol Glossary

SYMBOL	DEFINITION
	Indicates the medical device manufacturer.
	Date of manufacture (YEAR/MM/DD).
Ţ	Indicates the need for the user to consult an instruction for safety reasons such as cautions and warnings. If presented on the medical device or packaging, it indicates the need for the user to consult the instructions for safety reasons such as cautions and warnings.
MD	Indicates the item is a medical device.
SN	Indicates the manufacturer's serial number so that a specific medical device can be identified.
EC REP	Indicates the authorized representative in the European Community.
CE	Indicates the manufacturer's declaration that the product meets the requirements of the applicable EC directives.
	Indicates the need for the user to consult the instructions for use.
www.kimobility.com	Indicates the need for the user to consult the listed website for instructions for use in an electronic format.
†i	Indicates a website where a user may obtain additional information about the medical product.
MAX	Indicates a specified maximum weight limit (lbs/kg).
	Indicates a transit securement point.
	Indicates a potential pinch point.
	Indicates the entity importing the medical device into the locale.
150 7176-19 WC19	Conforms with ANSI/RESNA WC-4 Section 19 (WC19) and ISO 7176-19.
	Indicates not for transit use.

### G. General Warnings and Cautions

## **△** WARNING **△**

	Standard	Transit
Liberty	250 lbs (113 kg)	250 lbs (113 kg)

WARNING: Limits refer to combined weight in pounds of user and all items carried. Do not exceed weight limit of chair. Exceeding weight limit may damage your chair or may increase your risk of falling or tipping over. A tip-over or fall could result in serious injury or death.



Do not use chair for weight training. The movement of the additional weight alters the chair's center of gravity increasing your risk of tipping over. A tip-over could result in damage to your chair or in serious injury or death.



Do not hang backpacks, bags or heavy objects above the occupants center of gravity. The additional weight alters the chair's center of gravity increasing your risk of tipping over. A tip-over could result in serious injury or death. If additional loads need to be carried, it is recommended to use under seat carriers and pouches. Objects hung on the chair may cause instability, may prevent access to the chair components, may become entangled in moving parts or may cause a premature wear of chair components such as back upholstery and push handles.



Keep tires inflated to correct tire pressure. Using a chair without properly inflated tires may affect its stability, increasing your risk of tipping over. A tip-over could result in damage to your chair or in serious injury or death to you or others. Correct tire pressure is indicated on the side wall of the tire. Your wheelchair provider can determine if your tires are inflatable if you are unsure.



Avoid ramps or slopes inclined more than 9 degrees. Steep slopes increase your risk of falling or tipping over. A tip-over or fall could result in damage to your chair or in serious injury or death to you or others. Do not use chair on ramps or slopes tilted more than 9 degrees (about 2 inches rise/drop per linear-foot): neither up/down nor across.



Avoid inclined surfaces slick or coated with ice, oil or water. Slippery inclines could result in an inability to control the wheelchair on the surface and result in a tip-over or fall. A tip-over or fall could result in damage to your chair or in serious injury or death.



Avoid leaning over the side or back of your wheelchair to extend your reach.
Leaning over chair could change its center of gravity and cause an unstable situation resulting in a fall or tip-over. A tip-over or fall could result in damage to your chair or in serious injury or death.



Do not lift wheelchair by it's removable parts while occupied. Lifting a wheelchair by removable parts while occupied could cause user to fall or lose control. A fall or lose of control could result in damage to your chair or in serious injury or death.



Packaging material must be kept out of the reach of children. Improper handling of packaging materials and the neglect of the duty to supervise children could result in suffocation and serious injury or death.



Your wheelchair meets ISO 7176-16 for flammability. Resistance to ignition can change with use, aging or cleaning. Precautions should be taken to avoid ignition sources and proximity to flammable materials that can increase ignition such as oxygen and alcohol. Also, be aware that adding components, seating, postural supports or materials to the chair may alter flammability. Changes to flammability may result in serious injury or death.

### G. General Warnings and Cautions (Continued)



Any body part that presses against a wheelchair frame or other wheelchair components may create skin deformation that results in a high pressure point. High pressure points negatively affect the tissue under stress and can cause you to develop a pressure injury or skin breakdown. If your skin develops redness, or any other symptoms of a pressure injury or skin breakdown, discontinue the use of this product immediately and consult your clinician. Continuing to use the wheelchair after skin changes are present can result in serious injury or death.




For safe moving and lifting of the wheelchair without an occupant, it is recommended to fold the backrest (if configuration allows) and grip at points on the frame as indicated in diagram. Take care to not grip at points where components are removable or move during use of chair in order to avoid injury and a failure of the component.



 $\triangle$ 

Overall dimensions of wheelchairs vary according to its specific configuration such as seat depth, seat width, wheel and tire choices and the addition of aftermarket equipment not provided by Ki Mobility. If overall dimensions of your specific wheelchair exceeds the recommended dimensions in image below it may limit access to emergency escape routes. Inability to access an emergency escape may result in serious injury or death.

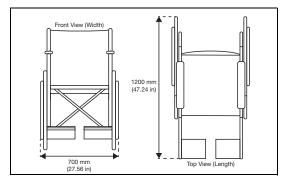

## riangle Caution riangle

CAUTION: Avoid overtightening bolts and hardware that attach components to the frame. Overtightening could cause damage to the chair; affecting its durability and performance. Damage to the chair could result in injury to the user.

NOTE: Information about tightening hardware can be found in the maintenance section of this manual. If you are unsure how to properly tighten bolts or hardware or lack the tools necessary, consult your authorized supplier.

#### H. Positioning Belts or Harnesses

## **⚠WARNING⚠**

WARNING: Improper use of positioning belts can cause the user to slide underneath the positioning belt in the wheelchair. If this should happen, chest compression or suffocation due to pressure from the belt can occur. If this occurs, the user's breathing may be hampered causing serious injury or death.



Improper use of positioning belts could cause body parts to become entangled which can restrict mobility and movement, which could result in serious injury or death.

Ki Mobility recommends the use of pelvic positioning belts. Pelvic positioning belts can reduce the risk of falling from your wheelchair.

Positioning belts, such as pelvic positioning belts and anterior trunk harnesses and straps, are designed to assist, retain and support proper positioning and posture in the wheelchair.

- Ensure the user does not slide underneath the positioning belt in the wheelchair seat.
- The positioning belt should have a snug fit; tight enough to hold their position, but not so tight as to restrict breathing. An open hand should be able to fit between the belt and the user.
- Proper use of cushions can contribute to pelvic stability and reduce sliding.
- NEVER Use Positioning Belts:
  - a. As a restraint. A restraint requires a doctor's order.
    - i. Unless you can remove the belts easily in an emergency. If you cannot do this, consult with your health care advisor for other options to help with your posture.
  - b. On a user who is unconscious or agitated.
  - c. As an occupant restraint or safety belt in a motor vehicle. A positioning belt is not designed to replace a seat belt that is attached to the frame of a vehicle, which would be required of an effective seat belt. During a sudden stop, with the force of the stop, the user would be thrown forward. Wheelchair seat belts will not prevent this, and further injury may result from the belts or straps. Reference Transit section of this manual for further information.

### I. Riding Your Wheelchair

## **⚠WARNING⚠**

WARNING: Avoid pushing or using your wheelchair on soft, rough, uneven, or slick surfaces (including but not limited to ice, sand, loose soil, grass, gravel, potholes, cracks, and broken pavement). Use on such surfaces could cause the wheelchair to lose stability causing it to tip unexpectedly resulting in a fall or loss of control. A fall or loss of control could result in damage to your wheelchair, serious injury or death.



Always look ahead for potential obstructions or surface transitions that could cause your front caster wheels to catch causing your wheelchair to abruptly stop. Failure to do so could cause the wheelchair to tip unexpectedly resulting in a fall or loss of control. A fall or loss of control could result in damage to your wheelchair, serious injury or death.

#### I. Riding Your Wheelchair (Continued)



Always look ahead for objects or obstructions that your wheelchair could potentially strike. Striking an object or obstruction could cause your wheelchair to tip unexpectedly resulting in a fall or loss of control. A fall or loss of control could result in damage to your wheelchair, serious injury or death. In addition, striking an object or obstruction could cause damage to your wheelchair. The risk of injuries and damage to your wheelchair when striking an object or obstruction increases with your rate of speed.



Using your wheelchair on public roads is extremely hazardous and is not recommended. Wheelchair users must obey pedestrian traffic rules. Review the traffic laws in your own state, some states do not permit wheelchair use on public roads.



Your balance is affected by the slope of the surfaces you ride on. Because balance is affected, your wheelchair will be less stable when it is at an angle. This is especially true when riding on a slope sideways. Riding your wheelchair on a slope could cause the wheelchair to tip unexpectedly and/or the user to lose stability resulting in a fall or loss of control. A fall or loss of control could result in damage to your wheelchair, serious injury or death.



When using your wheelchair in public or private areas (including but not limited to crosswalks, sidewalks, neighborhoods, parking lots and parks) be alert to the danger of motor vehicles. Due to your low position:

- •When lighting is poor use reflective tape on your wheelchair and clothing.
- •If you have the right-of-way always yield until the driver of the motor vehicle has seen you.



Use extreme caution when propelling backward. You may be unable to see an obstruction that could cause a tip over. Tipping over could result in damage to your wheelchair, serious injury or death.



Ki Mobility does not recommend balancing on just the rear wheels with the front casters off the ground (also known as doing a "wheelie"). A fall or tip over is very likely and could result in damage to your wheelchair, serious injury or death. If you choose to ignore this warning, do not attempt a wheelie unless you have been trained by a clinical or technical professional. You should always have the assistance of an able-bodied person prepared to prevent you from exceeding your tipping point.



Do not ride your wheelchair on an escalator. Use of a wheelchair on an escalator could cause a fall, tip-over or loss of control. A fall, tip over or loss of control could result in damage to your wheelchair, severe injury or death.



Avoid getting dressed or undressed in your wheelchair. Dressing or undressing in your wheelchair causes your weight to shift. Thus, increasing your risk of falling or tipping over. Falling or tipping over could result in damage to your wheelchair, serious injury or death.



Ki Mobility recommends using accessories such as heel loops and calf straps. When used properly, heel loops and calf straps can aid in preventing your legs and feet from accidentally slipping off the footplate or footrest potentially causing your feet to become entangled in the wheelchair and its components or strike the ground. Use of a wheelchair without accessories such as properly fitted heel loops and calf straps can result in a potentially hazardous situation which, if not avoided, could result in injury.

### I. Riding Your Wheelchair (Continued)

When using your wheelchair always:

- Scan the area well ahead of your wheelchair as you ride.
- Ensure the surfaces you ride on are level and free of obstacles.
- Remove or cover threshold strips between rooms.
- If your wheelchair has anti-tips make sure they are locked in place when riding your wheelchair (Reference IV, V. for proper use of anti-tips).
- Keep both of your hands on the handrims as you go over obstacles.
- Never push or pull off an object to propel your wheelchair.
- Make sure there is not a drop off at the bottom of ramps.
- On an up-slope, lean your upper body forward slightly to prevent tipping backwards.
- On a down-slope, press your upper body backwards to prevent tipping forward.
- Do not attempt to push over obstacles without assistance.
- Ensure all ramps, slopes or curb cuts you attempt to ride on are compliant with ADA (Americans with Disabilities Act) guidelines or the equivalent accessibility guidelines in your region.

ADA Guidelines and more information about accessible design are available at: www.ada.gov

#### J. Power Drives



WARNING: Ensure the power drive system has been validated and approved by the manufacturer for use with your Ki wheelchair and its configuration. Use of an unapproved external power drive system could result in mechanical failure of the wheelchair or cause a fall. A fall could result in damage to your wheelchair, severe injury or death.



Power drive systems change the stability and performance of the wheelchair.

Always use anti-tips with your power drive system. Failure to do so could result in your wheelchair tipping over backwards. Tipping over backwards could result in damage to your wheelchair, severe injury or death.



Always look ahead for objects or obstructions that your wheelchair could potentially strike. Power drive systems change the performance of the wheelchair and will increase the risk of tipping unexpectedly if you strike an object or obstruction. Tipping unexpectedly could result in a fall or loss of control. A fall or loss of control could result in damage to your wheelchair. The risk of injuries and damage to your wheelchair when striking an object or obstruction increases with your rate of speed.

Ki Mobility does not recommend the installation of power drive systems on any Ki Mobility wheelchair. Ki Mobility wheelchairs have not been designed or tested by Ki Mobility as power wheelchairs. If you add a power drive system to a Ki Mobility wheelchair, be sure the manufacturer of the power drive system has validated and approved the combination of the power drive system and wheelchair as safe and effective.

#### K. Your Wheelchair and the Environment

## **△** CAUTION **△**

CAUTION: Exposure to water or excessive moisture may cause the metal in the wheelchair to rust or corrode and the fabric to tear. Dry your chair as soon as possible if exposed to water.



DO NOT USE YOUR WHEELCHAIR IN A SHOWER, POOL OR BODY OF WATER. This will cause your wheelchair to rust or corrode and eventually fail.



Do not operate your wheelchair in sand. Sand can get into the wheel bearings and moving parts. This will cause damage and eventually will cause the wheelchair to fail.

### L. Modifying your Wheelchair

## **⚠WARNING ⚠**

WARNING: NO ONE SHOULD MODIFY THIS WHEELCHAIR EXCEPT BY ADJUSTING IT ACCORDING TO THIS MANUAL OR BY ADDING KI MOBILITY APPROVED OPTIONS. THERE ARE NO APPROVED OPTIONS THAT INVOLVE DRILLING OR CUTTING THE FRAME BY ANYONE OTHER THAN A TRAINED KI MOBILITY ASSOCIATE. Your wheelchair was engineered and manufactured under strict design controls. An integral part of this process is ensuring the various components work together correctly; they have been tested to various standards to ensure quality and are approved to work together. Contact an authorized supplier or Ki Mobility before adding any accessories or components not provided by Ki Mobility. Unapproved modifications or options could lead to fall and cause serious injury or death.

### M. Wheelchair Stability

## **△ WARNING △**

WARNING: The stability of your wheelchair could be affected when using on soft, rough, uneven (incline or decline), or slick surfaces (including but not limited to ice, sand, loose soil, grass, gravel, potholes, cracks, and broken pavement). Use on such surfaces could cause the wheelchair to tip unexpectedly resulting in a fall or loss of control. A fall or loss of control could result in damage to your wheelchair, serious injury or death.



Shifting weight in your wheelchair, adding weight to your wheelchair and carry or reaching for objects could affect the stability of your wheelchair. Thus, increasing your risk of falling or tipping over. Falling or tipping over could result in damage to your wheelchair, serious injury or death.



Avoid getting dressed or undressed in your wheelchair. Dressing or undressing in your wheelchair causes your weight to shift. Thus, increasing your risk of falling or tipping over. Falling or tipping over could result in damage to your wheelchair, serious injury or death.



Ki Mobility does not recommend balancing on just the rear wheels with the front casters off the ground (also known as doing a "wheelie"). A fall or tip over is very likely and could result in damage to your wheelchair, serious injury or death. If you choose to ignore this warning, do not attempt a wheelie unless you have been trained by a clinical or technical professional. You should always have the assistance of an able-bodied person prepared to prevent you from exceeding your tipping point.

### M. Wheelchair Stability (Continued)

## **⚠WARNING⚠**

WARNING: If the wheelchair is equipped with a system to vary the tilt angle of the seat frame, confirm it is stable throughout the range of angle changes before use. If the wheelchair is not stable throughout the range of tilt angles a fall or tip over is imminent. Falling or tipping over could result in damage to your wheelchair, serious injury or death.

Strategies to minimize the risk of falling:

- Ensure anti-tips are in the correct position (Reference IV, V. for proper use of anti-tips).
- Lean forward when pushing up an incline.
- · Lean back when pushing down a decline.
- Have an attendant behind you to provide assistance.
- Wheelchair set up should be done only by an authorized technician.
- · Always use the accessories provided.
- Your wheelchair should be adjusted by an authorized technician when there are changes in your weight or how you sit.
- Always use anti-tips where appropriate (Reference IV, V. for proper use of anti-tips).

To ensure proper stability of your wheelchair, you must make sure the center of gravity and the wheelchair's base of support is correct for your balance and abilities. Many factors can affect these two elements:

- · Seat height
- Seat depth
- Back angle
- Seat angle

- Size and position of rear wheels
- Size and position of front casters
- Seating system components
- Tilt position (If applicable)

There are additional actions that can have adverse effects on the stability of your wheelchair. You should consult with an assistive technology professional or clinical professional that is familiar with your needs and capabilities to determine what you are able to do safely while maintaining the stability of your wheelchair.

### N. Aftermarket Seating

## **↑** WARNING **↑**

WARNING: The installation of a cushion on a wheelchair could affect the center of gravity of the wheelchair. Changes in your center of gravity may affect your stability in your wheelchair, resulting in tipping over or falling from your wheelchair which may result in serious injury. Always review the instructions for use of your wheelchair to see if changes to the wheelchair may be needed to provide sufficient stability after adding a cushion.



The integrity of your skin can be affected by many aspects of your daily life and medical condition, including the use of this product. Be sure to follow any skin care regimens established by your clinician. Consumers of this product should make sure their skin is inspected routinely for changes as directed by their clinician. Failure to do so could result in serious injury or death.

#### Selecting the Proper Seating Product

You should consult with a licensed clinician (i.e. Physician or therapist) trained in wheelchair seating and positioning before selecting any seating and positioning product. This will help ensure you receive the right product for your specific needs.

### A. Curbs, Steps and Stairs

## **△ WARNING** △

WARNING: Do not ascend or descend more than 1 or 2 steps/stairs in your wheelchair. If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury or death to the rider or others.

- A. Do not try to climb or descend a curb or step alone UNLESS you are a skilled rider of this chair and:
  - a. You can safely do a "wheelie" and:
    - i. You are sure you have the strength and balance to do so.
    - ii. Unlock and rotate anti-tip tubes up, out of the way, so they do not interfere.
    - iii. Do not try to climb or descend a high curb or step (more than 4 inches high) UNLESS you have help. Doing so may cause your chair to exceed its balance point and tip over.
    - iv. Go straight up and straight down a curb or step. If you climb or descend at an angle, a fall or tip-over is likely.
    - v. Be aware that the impact of dropping down from a curb or step can damage your chair or loosen fasteners.
- B. Do not ascend or descend stairs in your wheelchair. Ascending and descending stairs can be challenging and may result in a fall that could result in damage to your wheelchair, serious injury or death to the user and/or those assisting.

#### B. Transfers

## **⚠WARNING⚠**

WARNING: There are many varied appropriate transfer techniques that depend on your level of disability and your unique individual functional capabilities. You should be trained by a clinical professional in the proper transfer technique for you. Assure that you can safely transfer on your own before attempting independent transfers. Be aware there is likely a point during the transfer when the wheelchair seat is not below you. Failure to perform a transfer properly can result in a fall that could result in severe injury or death.

NOTE: Before transferring out of your wheelchair every caution should be taken to reduce the gap between the two surfaces.

- 1. Engage the wheel locks to lock the rear wheels.
- 2. Rotate the casters forward to increase the wheelbase of the wheelchair.
- 3. Remove or swing away the footrests.
- 4. Have someone assist you unless you are well experienced and able in transfers.

#### C. Transit Use

### **↑** WARNING **↑**

WARNING: Never use your wheelchair as a seat in a motor vehicle unless it has been equipped with the transit option. It is always safest to transfer out of your wheelchair onto a seat in a motor vehicle with appropriate seat and shoulder belts. Using your wheelchair as a seat in a motor vehicle, if not equipped with the transit option, could result in serious injury or death.

The wheelchair equipped with the transit option has been tested to and passed the RESNA WC-4, Section 19: Wheelchairs used as seats in motor vehicles and ISO 7176-19 Wheelchairs -- Part 19: Wheeled mobility devices for use as seats in motor vehicles. RESNA and ISO standards are designed to test the structural integrity of the wheelchair as a seat for use in a motor vehicle. These standards are also designed to create compatibility with Wheelchair Tie-down and Occupant Restraint Systems (WTORS).


Not every wheelchair configuration is compatible with the transit option. Ki Mobility manages the configuration and does not offer this wheelchair except in compatible configurations. If you make changes to your wheelchair after you receive it, you should contact your wheelchair provider or Ki Mobility to make sure it is appropriate to continue to use your wheelchair as a seat in a motor vehicle.

Crashworthy Pelvic belt restraints and instructions for use are available from Ki Mobility Customer Service to be used in conjunction with a vehicle anchored shoulder belt. Aftermarket seating may have replaced the original equipment seat and back support designed and tested as part of the transit option. Your wheelchair provider should tell you if the seating they provided is original equipment or replacement aftermarket seating. A complete system of wheelchair frame, seating, Wheelchair Tie-down and Occupant Restraint Systems and a properly equipped motor vehicle, that have all complied with the standards mentioned in this section, should be in place before using a wheelchair equipped with the transit option as a seat in a motor vehicle.


When using your wheelchair as a seat in a motor vehicle you should always observe the following instructions:

#### C. Transit Use (Continued)

- The rider must be in a forward-facing position.
- The rider and all items carried must not weigh more than 250 lbs (113 kg).
- Some configurations of this model may exceed 28.5 in. (724 mm) in width which is the minimum width for lift platforms for ADA compliant vehicles.
- In case of heavy and oversized wheelchairs, transportation in larger vehicles is recommended when the option exists.
- Backpacks and pouches should be removed and secured separately in the motor vehicle.
   In the event of an accident these items can become dangerous projectiles, which may injure or kill you or other occupants of the motor vehicle.
- The rider must use a Wheelchair Tie-down and Occupant Restraint System that complies
  with RESNA WC-4, Section 18: Wheelchair tie-down and occupant restraint systems for
  use in motor vehicles or ISO 10542-1 Technical systems and aids for disabled or
  handicapped persons -- Wheelchair tie-down and occupant-restraint systems -- Part 1:
  Requirements and test methods for all systems.
- Attach the wheelchair tie-downs to the four securement points (two front, two rear) on the
  wheelchair with the transit option (Fig. 1) in accordance with the wheelchair tie-down
  manufacturer's instructions and RESNA WC-4, Section 18 or ISO 10542-1, Part 1.
- Use only designated securement points to secure your wheelchair to a vehicle.

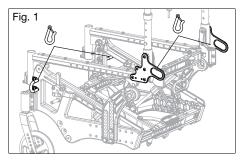

- Attach occupant restraints in accordance with the occupant restraint manufacturer's instructions and RESNA WC-4, Section 18 or ISO 10542-1, Part 1.
- Both pelvic and shoulder belt restraints should be used to reduce the possibility of head and chest impacts with vehicle components.

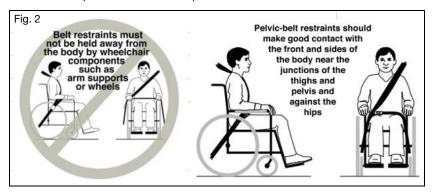

### C. Transit Use (Continued)

## **⚠WARNING⚠**

WARNING: Ensure restraint release mechanisms will not be activated by wheelchair components during a crash. Activation of restraint release mechanisms during a crash may result in serious injury or death.



Use of headrests, lateral supports or other positioning accessories should not be used, or a relied on as an occupant restraint. These belts should be positioned so that they don't interfere with the proper positioning of crash-worthy belt restraints and should not be relied on for occupant protection in crash situations unless the postural belt has been designed to comply with, and perform to, requirements 4.6, 5.2, 5.3 and 6.1 of RESNA WC-4.

### **△** WARNING **△**


WARNING: Back supports with adjustable incline angles should not be reclined more than 30 degrees to vertical during vehicle travel unless necessary for the postural and medical needs of the occupant. After being fitted and adjusted, the top of the back support surface should be within 4 inches (10.2 cm) of the top of your shoulder. Failure to properly adjust backs support and incline angles may result in serious injury or death.

- Any aftermarket seating should be tested to comply with RESNA WC-4, Section 20 or ISO 16840-4 - Part 4.
- Attach the seating to the wheelchair frame in accordance with the seating manufacturer's instructions and RESNA WC-4, Section 20 or ISO 16840-4 - Part 4.
- Accessories such as trays, oxygen tank holders, oxygen tanks, IV poles, back packs, pouches and items not manufactured by Ki Mobility should be removed and secured separately in the motor vehicle. In the event of an accident, these items can become dangerous projectiles which may injure or kill you or other occupants of the motor vehicle.
- If the wheelchair has been involved in an accident, you should not continue to use it, as it
  may have suffered fatigue, or damage, that may not be visible.

### C. Transit Use (Continued)

## **△** WARNING △

WARNING: If interior components of the vehicle cannot be removed from the clear zone (Fig. 3) especially those near the occupants head during a side impact or vehicle rollover, they should be padded with material that complies with FMVSS 201. Failure to pad interior components in the clear zone may result in serious injury or death.

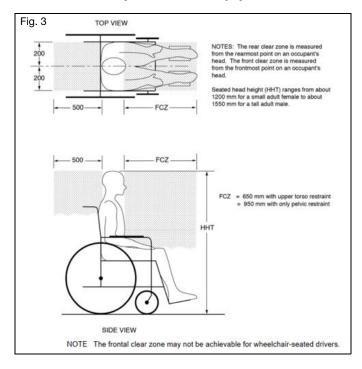

### C. Transit Use (Continued)

## **⚠WARNING⚠**

WARNING: Remove and secure any items temporarily attached to the chair while in a motor vehicle. Leaving items attached to the vent tray, battery tray or oxygen tank holder and not securing them properly and separately in a motor vehicle could result in these items becoming dangerous projectiles in the event of an accident. Additionally, oxygen tanks contain a highly pressurized gas that vigorously accelerates combustion. These factors could lead to serious injury or death to the user and/or anyone else in the vehicle.

- When using this wheelchair as a seat in a motor vehicle, you must remove any items attached to the vent tray, battery tray or oxygen tank holder and properly secure them separately.
- If the chair is equipped with an oxygen tank holder never use the wheelchair as a seat in a
  motor vehicle.

NOTE: To obtain copies of RESNA or ISO standards please contact the standards organizations below:

#### **RESNA**

www.resna.org

#### ANSI/RESNA Standards:

RESNA WC-4. Section 18:

Wheelchair tie-down and occupant restraint systems for use in motor vehicles.

RESNA WC-4. Section 19:

Wheelchairs used as seats in motor vehicles.

RESNA WC-4, Section 20:

Wheelchair seating systems for use in motor vehicles.

#### International Organization for Standardization (ISO)

www.iso.org

#### ISO Standards:

ISO 10542-1 Technical systems and aids for disabled or handicapped persons -- Wheelchair tie-down and occupant-restraint systems -- Part 1:

Requirements and test methods for all systems.

ISO 16840-4 Wheelchair seating - Part 4:

Seating systems for use in motor vehicles.

ISO 7176-19 Wheelchairs - Part 19:

Wheeled mobility devices for use as seats in motor vehicles.

#### U.S. Department of Transportation

FMVSS 201

www.nhtsa.gov

Occupant Protection in Interior Impact - Upper Head Impact Protection

#### **Transit Test Results**

Rating for lateral stability is Good.

Type of restraint: Three Point

Rating for ease of proper positioning a three point belt is Excellent.

Rating for the degree to which proper proper three point belt can be achieved is 16/16.

#### D. Cushion Use

## **⚠WARNING⚠**

WARNING: Avoid sitting for long periods of time without a proper wheelchair cushion. Sitting for long periods of time without a proper wheelchair cushion could cause pressure ulcers which could lead to serious infections or even death.



Secure the cushion before use or transfer. Failure to secure a cushion can cause it to slide out during use or transfers, resulting in a fall or loss of control. A fall or loss of control could result in damage to your chair or in serious injury or death to you or others.


- a. This wheelchair was designed to be used with a proper wheelchair cushion.
- b. The standard sling upholstery is provided with hook and loop self fastening strips. The cushion being used should have hook type fasteners that can engage the loop of the seat sling to keep the cushion from sliding out from under you. Ensure the cushion is securely attached before transferring or sitting in the wheelchair.
- c. A standard seat sling may not have been provided with your chair. Check with your wheel-chair provider if an aftermarket replacement to the original equipment sling has been provided. If so, make sure you follow the instructions for use provided by the aftermarket manufacturer.

### E. Transporting of Unoccupied Wheelchair

Ki Mobility wheelchairs are generally suitable for transport in motor vehicles and airplanes. Wheelchairs should always be secured (specific instructions from carrier required). Depending on wheelchair configuration, any particular wheelchair may be too large for transport in some motor vehicles or airplanes. Refer to other sections on how to remove options and accessories to decrease size for stowing.

### F. Your Liberty & Its Parts

- Inspect and maintain your chair using information found in the Maintenance and Care section.
- 2. If you detect a problem, contact your authorized supplier immediately.

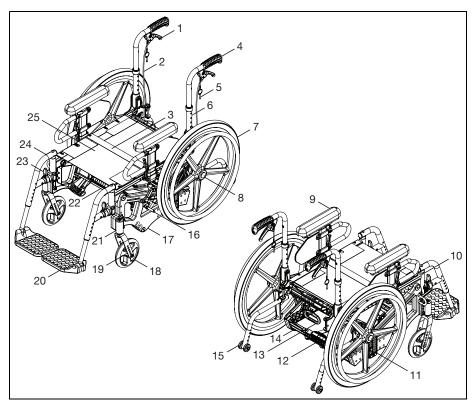

- 1. Tilt Lock Trigger
- 2. Tilt Cable
- 3. Folding Strap
- 4. Push Handle
- 5. Trigger Lock Pin
- 6. Back Cane
- 7. Rear Wheel
- 8. Quick-Release Axle
- 9. Armrest
- 10. Base Frame
- 11. Axle Plate
- 12. Foot Pad (Folding Option Only)
- 13. Folding Pull Handle (Folding Option Only)

- 14. Back Brace
- 15. Anti-Tip
- 16. Wheel Lock
- 17. Side Frame
- 18. Caster Wheel
- 19. Caster Fork
- 20. Footrest
- 21. Caster Arm
- 22. Front Brace
- 23. Swing Away Lever
- 24. Swing Away Hanger
- 25. Seat Upholstery


### G. Height Adjustable T-Arm

### **⚠ WARNING ⚠**

WARNING: These arms offer only a lock against rotation and are designed to bear a downward force only. They will remove completely if pulled up on and cannot be used to lift or otherwise handle the chair. Failure to comply with the instructions above may result in the armrest accidentally disconnecting from the wheelchair and result in a fall or loss of control and may cause serious injury or death.

#### How to Use Your Armrest

- 1. Installation
  - a. Slide the outer armpost into the receiver mounted to the wheelchair frame.
  - b. The armrest will automatically lock into place. Check to make sure the locking lever is as shown (Fig. 4:B).
- 2. Height Adjustment
  - a. Rotate the release lever (Fig. 4:A).
  - b. Slide the armrest pad up or down to the desired height.
  - c. Return the lever to the locked position against the arm post.
  - d. Push the arm pad until the upper arm locks firmly into place. Check to make sure the locking lever is as shown (Fig. 4:A).
- 3. Removing the Armrest
  - a. Squeeze the release lever (Fig. 4:B) and remove the armrest.

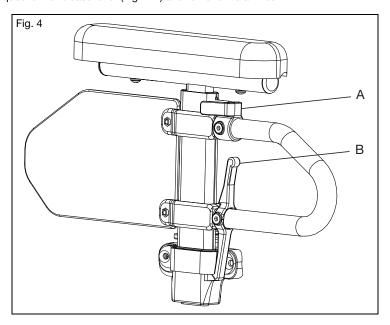

#### H. Tubular Flip Up Armrest

### **△** WARNING **△**


WARNING: These arms offer only a lock against rotation and are designed to bear a downward force only. They will remove completely if pulled up on and cannot be used to lift or otherwise handle the chair. Failure to comply with the instructions above may result in the armrest accidentally disconnecting from the wheelchair and result in a fall or loss of control and may cause serious injury or death.



Do not use tubular flip up armrests to support your weight for pressure relief or during a transfer. The tubular flip up armrests are for resting your arms on only and using them to support your weight could cause a fall resulting in serious injury or death.

#### How to Use Your Armrest

- To flip the armrest up, lift the armrest up until the stop block (Fig. 5:A) rests against the backrest cane.
- To flip the armrest down, lower the armrest down until the top section of the stop block (Fig. 5:A) rests against the backrest cane.

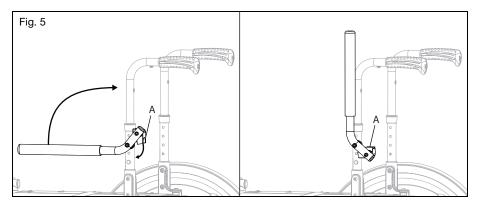


### I. Angle Adj. Locking Extendable Flip Up Armrest

## **△ WARNING** △

WARNING: These arms offer only a lock against rotation and are designed to bear a downward force only. They will remove completely if pulled up on and cannot be used to lift or otherwise handle the chair. Failure to comply with the instructions above may result in the armrest accidentally disconnecting from the wheelchair and result in a fall or loss of control and may cause serious injury or death.

#### How to Use Your Armrest

 - 1. Flip the Armrest Up
  - a. Press the release lever (Fig. 6:A) up to release the armrest.
  - b. Swing the released armrest up.
- 2. Return the Armrest to Operating Position
  - a. To return the armrest to the operating position, push the armrest down until the lever clicks and locks.



### J. Swing Away Hangers

### **⚠WARNING⚠**


WARNING: Ensure the hangers are locked into place before using or riding the wheelchair. Unlocked hangers during use can cause a fall resulting in serious injury or death.




Avoid tripping or falling during a transfer. Ensure your feet do not get caught in the space between the footrests and avoid putting weight on the footrests as the chair may tip forward and cause a fall resulting in a serious injury or death.

#### How to Use Your Hangers

- 1. Installation
  - a. Place swing away pivot saddle into the receiver on the front frame tube with the footrest facing either inward or outward from the frame (Fig. 7).
  - b. Rotate the footrest so it aligns with the frame and locks into place in the latch block (Fig. 8).

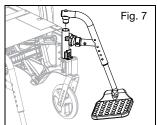

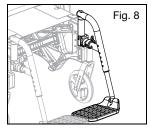

### J. Swing Away Hangers (Continued)

- 2. Swinging the Footrest Away
  - a. Push the release latch toward the frame.
  - b. Rotate the footrest outward or inward as desired.
- 3. Removal
  - a. To remove the footrest, push the release latch toward the frame.
  - b. Lift the footrest straight upward to remove. You may also swing the footrest inward or outward before lifting it off.

### K. Swing Away Hangers with 4-Way Latch


## **↑ WARNING ↑**

WARNING: Ensure hangers are locked in place before using wheelchair. Unlocked hangers while using the wheelchair could cause a fall resulting in serious injury or death.

Avoid tripping or falling during a transfer. Ensure your feet do not get caught in the space between the footrests and avoid putting weight on the footrests as the chair may tip forward and cause a fall resulting in a serious injury or death.

#### How to Use Your Hangers with 4-Way Latch

- 1. Installation
  - a. Place the swing away pivot saddle into the receiver on the front frame tube (Fig. 9:A)
  - b. Rotate the footrest so that it aligns with the frame and locks into place in the latch block (Fig. 9:B).
- 2. Swinging the Footrest Away
  - a. Push or pull on the release latch.
  - Botate the footrest outward or inward as desired.
- 3 Removal
  - a. To remove the footrest, push or pull the release latch.
  - b. Lift the footrest straight upward to remove. You may also swing the footrest inward or outward before lifting it off.

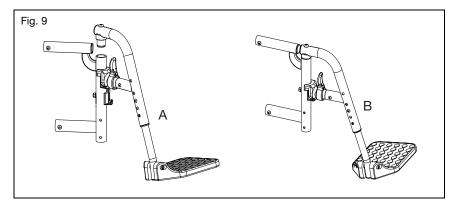


#### L. Extension Tubes

## **WARNING** 🗘

WARNING: Ensure hangers are locked into place before using or riding the wheelchair. Unlocked hangers during use can cause a fall resulting in serious injury or death.

#### How to Adjust the Extension Tubes

- 1. Remove the mounting fasteners from each side of the hanger tube.
- 2. Slide the footrest extension tube to the desired height.
- 3. Line up the holes and reassemble the fasteners into the desired hole through the hanger and the extension tube.
- 4. Repeat steps 1 3 on opposite side (Fig. 10).

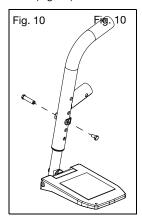

### M. Elevating Leg Rest

WARNING: Ensure hangers are locked in place before using wheelchair. Unlocked hangers while using the wheelchair could cause a fall resulting in serious injury or death.


Avoid tripping or falling during a transfer. Ensure your feet do not get caught in the space between the footrests and avoid putting weight on the footrests as the chair may tip forward and cause a fall resulting in a serious injury or death.

#### How to Use the Elevating Leg Rest

- 1. Installing the Elevating Leg Rest
  - a. Place the swing away pivot saddle into the receiver on the front frame tube with the footrest facing either inward or outward from the frame. Similar to the swing away footrest pictured in Fig. 9.
  - b. Rotate the footrest so it aligns with the frame until it locks into place in the latch block.
- 2. Removing the Elevating Leg Rest
  - a. To remove the footrest, push or pull the release lever.
  - b. Rotate the footrest outward and lift.

### M. Elevating Leg Rest (Continued)

- 3. Adjusting the Extension Tube
  - a. Remove the mounting bolt that is threaded into the leg rest tube in the center of the pad bracket (Fig. 11:C). In some circumstances, this bolt may be inserted in the tube below the pivot bracket.
  - b. Slide the footrest extension tube to the desired height.
  - c. Line up the holes and replace the bolt through the leg rest tube and the extension tube.
  - d. Repeat steps a c on opposite side.
- 4. Adjusting the Angle of the Leg Rest
  - a. To raise, lift up on the rear of the extension tube (Fig. 11:A). The rod will slide through the ratchet in this direction. Stop at the desired position.
  - b. To lower, firmly hold the leg from behind the extension tube (Fig. 11:A). Pull forward on the lever (Fig. 11:B) and while holding the lever, lift the leg rest. Releasing the lever will cause the leg rest to lock into position.

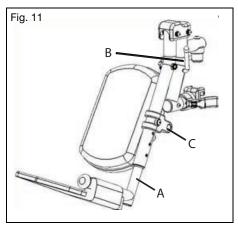

### N. Pro Elevating Leg Rest

## **↑** WARNING **↑**

WARNING: Ensure hangers are locked in place before using wheelchair. Unlocked hangers while using the wheelchair could cause a fall resulting in serious injury or death.


Avoid tripping or falling during a transfer. Ensure your feet do not get caught in the space between the footrests and avoid putting weight on the footrests as the chair may tip forward and cause a fall resulting in a serious injury or death.

#### How to Use the Pro Elevating Leg Rest


- 1. Installing the Pro Elevating Leg Rest
  - a. Place the swing away pivot saddle into the receiver on the front frame tube with the leg rest facing either inward or outward from the frame. Similar to the swing away footrest pictured in Fig. 9.
  - b. Rotate the leg rest so that it aligns with the frame and locks into place in the latch block.

### N. Pro Elevating Leg Rest (Continued)

- 2. Adjusting the Height of the Calf Pad
  - a. Loosen nut (Fig. 12:A) using a 10mm wrench.
  - b. Slide the calf pad arm up or down to the desired location.
  - c. Retighten the nut.
- 3. Adjusting the Depth of the Calf Pad
  - a. Remove the screw (Fig 12:B) and nut (Fig. 12:C) on the calf pad arm using a 5mm Allen wrench and a 13mm wrench.
  - b. Pick the desired location based on the four predrilled holes and reinstall the screw and nut.

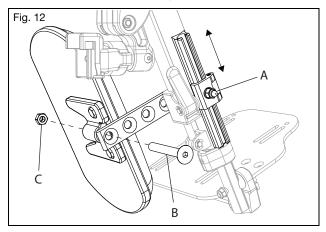

- 4. Adjusting the Length of Footrest
  - a. Loosen the set screw (Fig. 13:A) with a 4mm Allen wrench.
  - b. Slide the extension tube in or out to get to the desired length and secure by tightening the set screw.

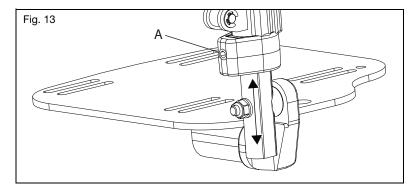


### N. Pro Elevating Leg Rest (Continued)

#### 5. Raising/Lowering the Pro Elevating Leg Rest

Remove the Pro ELR from the chair or remove weight from the Pro ELR while lowering to avoid a sudden drop when the lever lock is pushed. The calf pad can also swing outward to clear the front of the chair during certain movements if necessary.

- a. To raise the Pro ELR, lift the leg rest tube (Fig. 14:A) to the desired angle of elevation.
- b. To lower the Pro ELR, press and hold the lever lock (Fig. 14:B) while pushing the leg rest tube (Fig. 14:A) down.
- c. Retighten the nut.

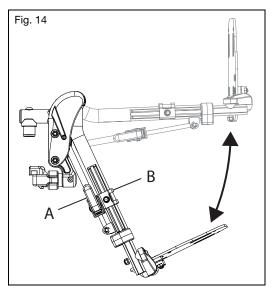

- 6. Removing the Pro Elevating Leg Rest
  - a. To remove the leg rest, push or pull the release latch.
  - b. Lift the leg rest straight upward to remove. You may also swing the leg rest inward or outward before lifting it off.

### O. Pediatric Elevating Leg Rest

### **⚠ WARNING ⚠**


WARNING: Ensure hangers are locked in place before using wheelchair. Unlocked hangers while using the wheelchair could cause a fall resulting in serious injury or death.




Avoid tripping or falling during a transfer. Ensure your feet do not get caught in the space between the footrests and avoid putting weight on the footrests as the chair may tip forward and cause a fall resulting in a serious injury or death.

#### How to Use the Pediatric Elevating Leg Rest

- 1. Installing the Pediatric Elevating Leg Rest
  - a. Place the swing away pivot saddle into the receiver on the front frame tube with the leg rest facing either inward or outward from the frame. Similar to the swing away footrest pictured in Fig. 9.
  - b. Rotate the leg rest so that it aligns with the frame and locks into place in the latch block.
- 2. Adjusting the Height of the Calf Pad
  - a. Loosen nut (Fig. 15:D) using a 10mm wrench.
  - b. Slide the calf pad arm up or down to the desired location.
  - c. Retighten the nut.
- 3. Adjusting the Depth of the Calf Pad
  - a. Remove the screw (Fig. 15:C), washer (Fig. 15:B) and nut (Fig. 15:A) on the calf pad arm using a 5mm Allen wrench and a 13mm wrench.
  - b. Pick the desired location based on the four predrilled holes and reinstall the screw and nut.

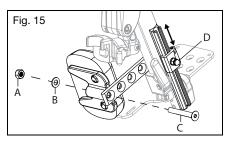

- 4. Adjusting the Knee Height
  - a. Use two 10mm socket wrenches to loosen the nuts (Fig. 16:A) on the cover.
  - a. Adjust the knee height to the desired setting.
  - a. Retighten the nuts to secure the knee height.

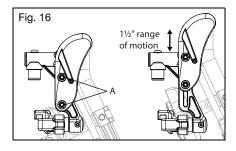


### O. Pediatric Elevating Leg Rest (Continued)

5. Using the Pediatric Elevating Leg Rest

Remove the Pediatric Pro ELR from the chair or remove weight from the Pediatric Pro ELR while lowering to avoid a sudden drop when the lever lock is pushed.

- a. To raise, lift the leg rest tube (Fig. 17:A) to the desired angle of elevation.
- b. To lower, press and hold the lever lock (Fig. 17:B) while pushing the leg rest tube (Fig. 17:A) down.
- 6. Removing the Pediatric Elevating Leg Rest
  - a. To remove the leg rest, push or pull the release latch.
  - b. Lift the leg rest straight upward to remove. You may also swing the leg rest inward or outward before lifting it off.

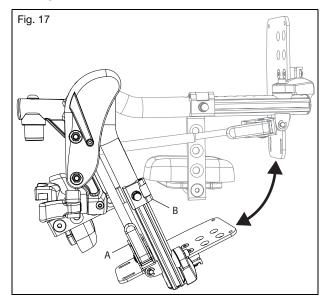


#### P. Backrest

### **⚠ WARNING ⚠**

WARNING: Ensure hangers are locked in place before using wheelchair. Unlocked hangers while using the wheelchair could cause a fall resulting in serious injury or death.


#### How to Fold the Angle Adjustable Backrest Down

- 1. Push the levers (Fig. 18:A) toward the front of the chair to disengage the latches. If the backrest seating is attached, both latches must be disengaged simultaneously in order to allow the backrest to fold.
- 2. Push forward on the backrest to rotate it downward. Once it begins to rotate forward the latch levers may be released.

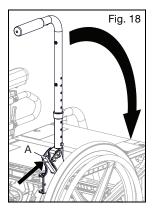

#### How to Remove a Stroller Handle


- Depress the buttons (Fig. 19:A) on both sides of the chair toward the lower end of the stroller tubes to disengage the locking tabs.
- 2. Pull the handle out of the receivers to remove or push the stroller handle into the receivers to install. For best results, insert both sides at the same time.

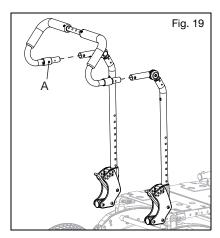

### Q. Adjusting/Installing Strap - Folding Chair Only

#### How to Route the Strap


 The strap is attached to one bracket. Take the opposite end of the strap and go under, over and under the middle clip. Take the end of the strap up through the end bracket and out. Route the strap back to the middle clip and go under, over and under again. See Fig. 20 for help with strap routing.

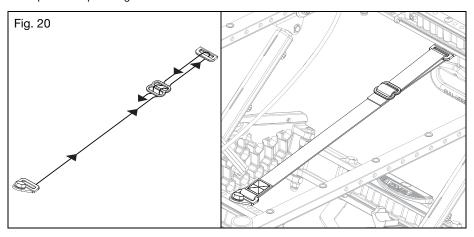

#### Strap Adjustment

- Remove all of the slack in the strap by pulling the end of the strap (Fig. 21:A). You may need
  to help push slack through the middle clip and then pull the end of the strap to remove the
  slack in some cases.
- 2. Verify that chair folds and unfolds properly.


NOTE: All three cross struts should go over center during folding when adjustments are correct.

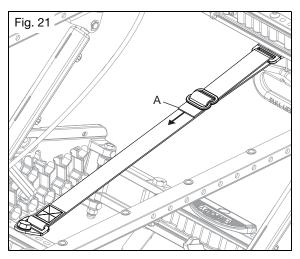

### R. Folding and Unfolding Chair - Folding Chair Only

## **⚠WARNING⚠**


WARNING: Avoid pushing on parts other than the red lockout tab and footpad during the folding process. Pushing on parts other than the red lockout tab and footpad can cause pinch points in the moving crossing braces. Pinch points can result in serious injury.

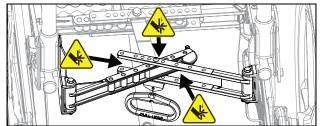


Verify cross braces are aligned and red lockout tab is engaged prior to transferring into the chair. Failure to verify that the cross braces are aligned and the red lockout tab is engaged can cause a fall resulting in serious injury or death.

#### Folding Your Chair

- 1. Ensure the wheel locks are engaged.
- Removal of the hangers is optional, but suggested (footplates will restrict minimum fold width).
- 3. Always remove the O2 tanks, IV poles and accessories and store appropriately.
- Push the red lockout tab (Fig. 22:B) down and push forward to begin the folding process of the upper cross brace (Fig. 22:A).

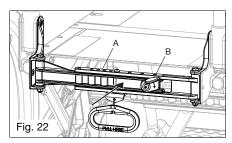


Push on the red footpad (Fig. 23:A) found on the rear lower crossbrace (Fig. 23:B) with your foot to begin the folding process of the lower crossbrace.

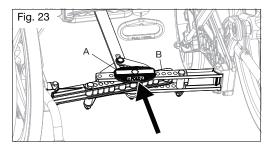

# R. Folding and Unfolding Chair - Folding Chair Only (Continued)

6. Pull up on the folding strap (Fig. 24:A) in the center of the seat until the chair is fully folded. Pulling upward at a slight angle will help one side of the chair to remain on the floor and the other side to move more easily.

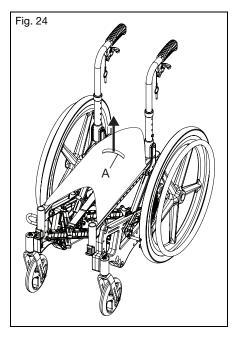


7. Fold down the back canes if equipped with a fold down back.


# R. Folding and Unfolding Chair - Folding Chair Only (Continued)

#### Unfolding Your Chair

- 1. Confirm the wheel locks are engaged.
- Separate the sides of the chair as far as possible by slightly pulling sideways on the wheel or handrim.
- 3. Use your foot to pull back the lower cross brace until straight. See Fig. 25.

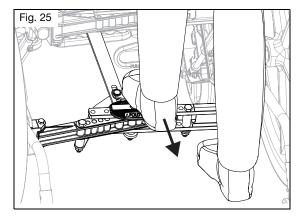

4. Pull the red handle (Fig. 26:B), found under the seat, until the upper rear cross brace is straight and the red lockout tab (Fig. 26:A) springs upward and clicks into place.

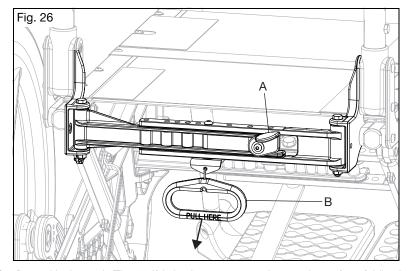


5. Confirm red lockout tab (Fig. 26:A) is in place to prevent the crossbrace from folding inward.

#### S. Tilt Mechanism

## **△ WARNING △**

WARNING: Keep fingers away from seat frame and out from under the chair when tilting. Fingers can get caught in pinch points on the seat frame and under the chair during the tilt process which can result in injury to yourself.

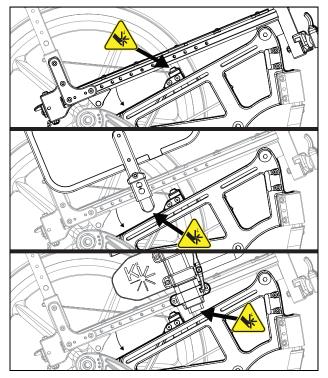


NOTE: A side guard at the lowest setting may interfere with the final few degrees of maximum tilt.

How to Use the Hand Operated (Trigger) Tilt

- 1. Tilting the Seat Frame
  - a. Squeeze the triggers (Fig. 27:A).
  - b. While keeping the triggers depressed, raise or lower the rear of the seat frame to the desired position.
  - c. Release the triggers to lock into place.
- 2. Adjusting the Tilt Cable
  - a. Unlock the jam nut (Fig. 27:C) from the cable adjuster body (Fig. 27:D) using a 10mm and 3/8" open ended wrench.
  - b. Thread the cable adjuster (Fig. 27:B) in or out until the slack in the cable is eliminated such that the trigger has an 1/8" (8mm) of play before it begins to pull the cable.
  - c. Verify the function of the cable. Tilt mechanism should lock at all locations.

## S. Tilt Mechanism (Continued)

d. Once cable is adjusted, repeat on opposite side and verify that tilt is functioning properly. Relock the jam nut against the cable adjuster body (both cables) by tightening the nut only, not the male adjuster or the adjuster body.

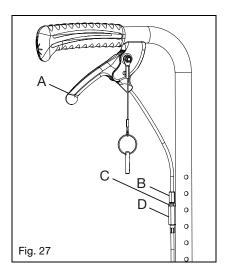


3.Locking the Triggers

# **⚠WARNING ⚠**

WARNING: Do not utilize the locking pin to maintain an unlocked tilt mode. This may lead to serious injury or death.

- a. Make sure the chair is locked by pushing on the back handles.
- b. Insert the pin attached to the trigger by a lanyard into the hole on the trigger mount. See Fig. 28.
- c. Make sure the trigger no longer releases the tilt locks by gently squeezing the trigger and pushing on the back canes to tilt the chair.

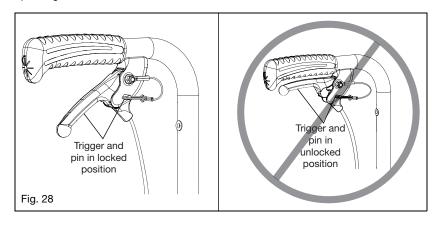


### T. Rear Wheels

# **⚠WARNING⚠**

WARNING: Before operating chair, assure the push button is completely extended and locking balls on the inside are fully engaged. Failure to do so may result in the wheel falling off, which could cause a fall or tip-over resulting in serious injury or death to you or others.

#### How to Use Your Rear Wheels

- 1. Installing the Wheels
  - a. Push in the quick release button (Fig. 29:B) on the axle (Fig. 29:C) to allow the locking balls to retract. Make note of the difference between the extended and depressed position of the axle release button and its effect on the locking balls on the other end of the axle.
  - b. Insert the axle into the bearing housing on the wheel if it's separate.
  - c. Push on the quick release button again and slide the axle into the axle sleeve (Fig. 29:A).
  - d. Release the button to lock the axle in sleeve. If the release button does not fully extend and the locking balls do not move into the locked position after releasing the button, the axle length needs to be adjusted.
  - e. If the wheel does not fit, try installing it on the opposite side.

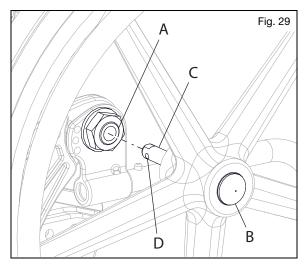

#### 2. Removing the Wheels

- a. Hold the wheel close to the hub and push the button in on the outside end of the axle.
- b. While still holding the button, pull the wheel and the axle out of the axle sleeve.

### U. Wheel Locks

# **△ WARNING** △

WARNING: Underinflated or worn tires may cause your wheel locks to not function properly. Failure of the wheel locks to hold your chair could cause a loss of control or fall resulting in serious injury or death.


 $\triangle$ 

Wheel locks are not to be used as brakes to slow or stop your wheelchair. Using a wheel lock as a brake could cause loss of control or a fall resulting in serious injury or death.

#### How to Adjust Your Wheel Locks

NOTE: Always loosen and tighten wheel hardware by alternating between the two bolts while loosening/tightening a little at a time. This prevents overclamping on one set of hardware which leads to binding of the fasteners and increased difficulty in removal.

- Use a 10mm wrench or socket to loosen (do not remove) the hex bolt (Fig. 30:B) beneath the mounting block of the base frame.
- 2. Slide the mount plate (Fig. 30:A) forward or rearward to achieve proper locking.
- 3. Retighten the hex bolt.

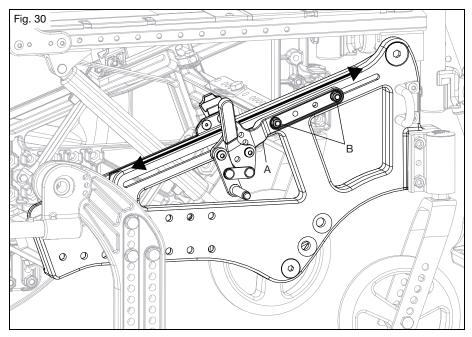

### Wheel Lock Operation

- Wheel lock operation is based on the lock style your chair is equipped with. Engagement of the wheel lock bar to tire is done by pushing or pulling the wheel lock handle to fully engage the wheel lock bar to tire.
- 2. To disengage wheel lock move in opposite direction.

## V. Anti-Tips

# **⚠ WARNING ⚠**

WARNING: Always keep anti-tips in the down position when they are not at risk of interference. Have a clinical or technical professional confirm your anti-tips are installed in the correct position. They can do so by tipping the occupied wheelchair back on to the anti-tips to test that they properly limit the rearward rotation of your wheelchair. If the anti-tips allow your wheelchair to tip to a point where your center of gravity (COG) is vertically aligned with the point where the wheel contacts the ground, the wheelchair is unstable and could result in the wheelchair tipping over. Tipping over could result in damage to your wheelchair, serious injury or death.



New and experienced wheelchair users switching to a new wheelchair or adjusting the configuration of a current wheelchair should always use anti-tips. If the user has a change in physical capabilities, they should use anti-tips as well. Any change in the user's physical capabilities or wheelchair increases the risk of tipping over backwards. Tipping over backwards could result in damage to your wheelchair, serious injury or death. You should always use anti-tips until you have adapted to the new or adjusted wheelchair.



Remove or turn the anti-tips up when ascending or descending curbs, obstacles and steps. If the anti-tips are left in the down position when ascending or descending curbs, obstacles and steps, they can become bent or broken. If the anti-tips are bent or broken, they will no longer prevent the wheelchair from tipping over backwards. Tipping over backwards could result in damage to your wheelchair, serious injury or death.




Using your wheelchair on soft surfaces (including but not limited to sand, loose soil, grass and gravel), uneven grades and ramps can cause anti-tips to lose effectiveness resulting in the wheelchair tipping over backwards. Tipping over backwards could result in damage to your wheelchair, serious injury or death.



Ki mobility recommends using two anti-tips on your wheelchair. Use of a single anti-tip increases the risk of tipping over backwards. Tipping over backwards could result in damage to your wheelchair, serious injury or death.


Ki Mobility recommends using anti-tips with your wheelchair. Anti-tips help prevent your wheelchair from tipping over backwards. When adjusted properly, anti-tips provide a significant increase in rearward stability. Use of anti-tips does not guarantee your wheelchair will not tip over. Always remember to reinstall or turn the anti-tips to the down position after they were removed or turned to the up position.

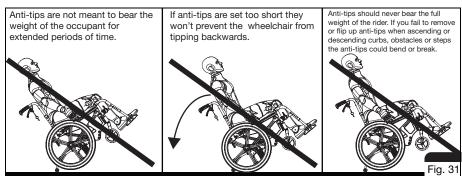

## V. Anti-Tips (Continued)

#### How to Use the Anti-Tips

- 1. Flipping Anti-Tips Up
  - a. Depress buttons (Fig. 32:A) on anti-tips.
  - Flip anti-tips up until the depressed buttons click into the hole on the bottom of the receiver.
- 2. Removing Anti-Tips
  - a. Depress buttons (Fig. 32:A) on anti-tips.
  - b. Pull anti-tip straight back to remove anti-tip from receiver.
  - c. To reinstall, press buttons in and push anti-tips back into receivers, aligning holes in receiver with front detent button.
- 3. Setting for Seat Height
  - a. Depress lower button (Fig. 32:B) on anti-tip.
  - b. Pull anti-tip down or up to the height desired.
  - c. Ensure lower button clicks into one of the height setting holes.
  - d. Repeat for opposite side of chair. Ensure anti-tips on both sides of chair are set up identically.

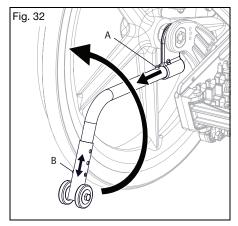

### W. Contact Surfaces

# $\triangle$ WARNING $\triangle$

WARNING: Handling of wheelchair surfaces with elevated temperatures can result in a potentially hazardous situation which, if not avoided, could result in injury.

Do not expose the chair and components to any extreme cold. Extremely cold metal surfaces may result in skin freezing to the surface and resulting in skin damage.

Be aware that prolonged exposure to direct sunlight or other sources of radiant heat may increase the temperature of surfaces on your wheelchair above recommended limits estimated by standards.

Caretakers should assess patients for adverse reactions on the skin from contact surfaces such as redness, swelling, irritation sensitization, allergy, immune response or other reactions.

## X. Oxygen Tank Holder

# **⚠WARNING⚠**

WARNING: Remove and secure any items temporarily attached to the chair while in a motor vehicle. Leaving items attached to the oxygen tank holder and not securing them properly and separately in a motor vehicle could result in these items becoming dangerous projectiles in the event of an accident.



Oxygen tanks can be dangerous if not used properly. Oxygen tanks contain a highly pressurized gas that vigorously accelerates combustion. Ensure you have been provided proper instructions for using an oxygen tank by the supplier of your tank. You must heed all warnings and follow all of the instructions for use that have been provided by the supplier of your oxygen tank. Failure to follow all of the instructions for use, and heed all warnings, for oxygen tanks can result in serious injury or death.

#### How to Use the Oxygen Tank Holder


1. Instructions for Use:

This oxygen tank holder has been designed to secure D cylinders to your wheelchair. Ensure that the bottle is well seated in the bottom of the holder and the clamp is tightened to the point that the cylinder cannot be pulled out.

### Y. Hemi Wheel Lock

### Identify Master (Drive) Side and Follower Side

The master (drive) side has the wheel lock with the handle for activating the brake. In Fig. 33, the master (drive) side is shown on the right side of the chair.

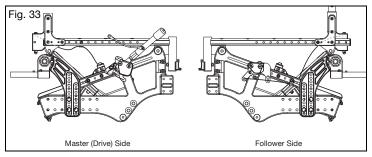

### Adjusting the Locks

- 1. Ensure the wheel lock mount is loose enough to move freely.
- Set the wheel lock assemblies into the locked position with the knurled bar barely contacting the tire.
- 3. With the bolts loosened, slide the assemblies toward the tires in 1/4" increments until the chair can be lifted by the wheels with locked tires without the wheels rotating.
- 4. Verify the master lock assembly wheel lock can enter the over-center position when in the locked position and the follower lock assembly wheel lock can return to the unlocked position and tighten.

### 7. Drum Brake

# **⚠WARNING ⚠**


WARNING: Ensure the drum brakes are properly adjusted. Using your wheelchair without properly adjusted drum brakes can affect the stability of the wheelchair causing a loss of control resulting in serious injury.

# **△** CAUTION △

CAUTION: When stowing or transporting your wheelchair with the drum brakes removed, take care not to damage the exposed brake pads which can cause damage to your chair and affect the proper operation of the drum brakes (Fig. 34:C).

#### 1. Brake Operation

- a. Squeeze the brake levers (Fig. 34:A) on both sides of chair to activate brakes. Each side is operated independently and may be squeezed with more or less force to get more or less braking action.
- braking action.
  b. Let go of brake levers to release brake

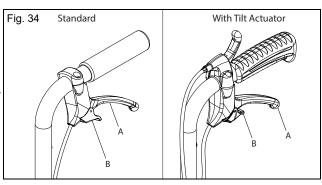


- c. For parking brake function, squeeze each brake lever and, with trigger squeezed, use index finger to flip locking lever (Fig. 34:B) down into the teeth on the lever mount. While holding the locking lever down, release brake handles and parking brake will remain engaged.
- d. To release the parking brake, squeeze the brake levers until spring loaded locking levers snap back. Release the brake levers to deactivate the brake.

#### 2. Brake Adjustment

- a. Using a 10mm wrench, unlock the jam nut (Fig. 35:A) on adjuster (Fig. 35:B).

  Unthread adjuster to get tighter braking action or thread adjuster in to reduce the braking action.
- b. It is recommended to adjust the brake until there is a slight bit of drag on the wheel when spun. Then thread the adjuster inward about ½ turn, or whatever is necessary to remove all drag from the spinning wheel.
- c. Retighten jam nut to lock the adjustment in place. Repeat for opposite side of chair.

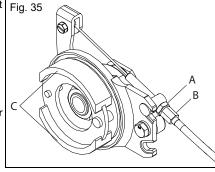

d. Verify that the drum brake, when fully enaged, still prevents the wheels from rotating by attempting to push the wheelchair with the occupant in it and the wheels locked.


### AA. Cane and Crutch Holder

# **△ WARNING** △

WARNING: Always remove any items temporarily attached to the wheelchair while in a motor vehicle. Leaving items attached and not storing them securely and separately in a motor vehicle could result in these items becoming dangerous projectiles in the event of a sudden or abrupt change in speed or direction. Additionally, secure canes or crutches in a proper manner while riding your wheelchair. These items may become entangled in the wheelchair resulting in a fall or tip-over. A fall or tip-over may result in damage to your chair or in serious injury or death.

#### How to Use Cane or Crutch Holder

- 1. Place narrow end of cane or crutch in the bottom receiving cup (Fig. 36:B).
- Use the hook and loop fastener (Fig. 36:A) to secure the cane or crutch to the upper back cane. Confirm the canes or crutches will stay securely in place, both vertically and horizontally, when the wheelchair is in motion.

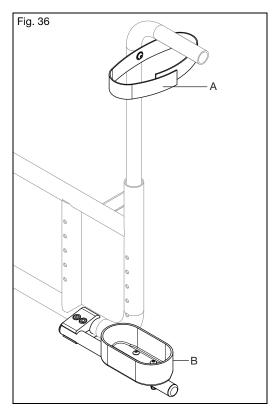

### **BB. Transit Wheels**

# **△** WARNING **△**

WARNING: Deploy, stow and use transit wheels only on firm, flat and level surfaces. Use on surfaces that are not firm, flat and level could cause a fall or tip over resulting in serious injury or death.



Read and understand from Notice - Read Before Use section the instructions on Wheelchair Stability from your Liberty Owner's Manual before using the transit wheels. Verify stability with the anti-tippers in place when you first use the Transit Wheels and after any changes that affect stability as indicated in your Liberty Owner's Manual. Failure to verify stability before using the Transit Wheels could cause a fall or tip over resulting in serious injury or death.

#### **Deploy the Transit Wheels**


NOTE: Before deploying the Transit Wheels, read and practice the Rear Wheel section in the owner manual for proper removal and installation of the rear wheels.

- 1. Pull back each transit wheel rearward and allow the wheels to drop to the ground.
- 2. Confirm that the transit wheels are locked.
- 3. Assure you have a firm grip on both handles and are in a stable and balanced standing position. Pull the chair backwards until the transit wheels raise the propulsion (rear) wheels off the ground and lock into a downward position (It may be necessary to place a foot behind the transit wheel if the ground surface lacks friction. In doing so, make sure you are in a stable and balanced standing position).
- 4. Remove the propulsion (rear) wheels.

#### Stow the Transit Wheels

NOTE: Before stowing the Transit Wheels, read and practice the Rear Wheel section in the owner manual for proper removal and installation of the rear wheels.

- 1. Lock the transit wheels.
- 2. Fully install the propulsion (rear) wheels, confirm they are attached properly and lock the propulsion (rear) wheel locks.
- Assure you have a firm grip on both handles and are in a stable and balanced standing position. Press down and pull back the release lever on the top of the transit wheel assembly with your foot which will release the transit wheel.
- 4. Gently push the chair forward to lower the chair onto the propulsion (rear) wheels.
- 5. Lift the transit wheels into the stowed position with your foot.

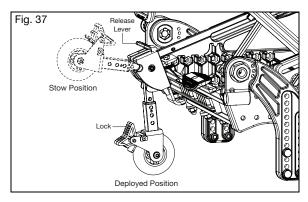


### CC. Removable Seat Pan

# **↑** WARNING **↑**

WARNING: Before operating chair, assure removable seat pan is installed correctly. Failure to do so may result in the seat pan failing to support you resulting in a fall or serious injury during a crash.

- 1. Install seat pan fully rearward then press down until locked into place.
- 2. Insert four pins (Fig. 38:A) to secure seat pan and ensure the bearings (Fig. 38:B) clear the brackets.
- 3. To remove seat pan, remove four pins.
- 4. Lift the front of the seat pan first until the rear releases.

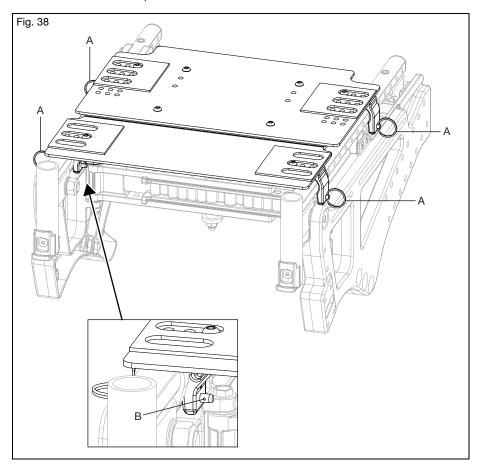

### V. MAINTENANCE AND CARE

### A. Maintenance Table

Regular and routine maintenance will extend the life of your wheelchair while improving its performance. Wheelchair repairs, the replacement of parts and any maintenance check that you are not comfortable performing should be done by an authorized supplier. Only use Ki Mobility approved parts when replacing components. Contact your Authorized Service Representative (Dealer locator can be found at Ki Mobility website) for parts information, identification, ordering and additional technical information or instruction. Most components are illustrated in "Ki Parts" on the Ki Mobility website.

Common tools to perform user authorized maintenance include: Tire pressure gauge, open end metric wrenches and metric allen wrenches.

# $\triangle$ CAUTION $\triangle$


CAUTION: Do not use petroleum-based solvents, degreasers or dewatering agents (including but not limited to automotive cleaners, alcohols or WD-40). Damage to components, bearings or finishes may occur.

Check	Weekly	Monthly	Annually
Check the tire inflation levels and inflate as needed. The correct inflation levels are found on the tire. (See pressure conversion table below if required - Fig. 39)	1		
Check wheel lock engagement and disengagement. Tire pressure changes and tire wear will require the wheel locks to be adjusted. Wheel lock adjustment instructions can be found in the Wheel Locks section of this manual.	1		
Check the axle sleeves and axle plates to ensure the axle sleeve nuts are tight.	1		
Check that quick release axles engage and disengage properly.	1		
Check that caster wheels, anti-tip wheels and rear wheels spin freely. Cleaning or replacement parts may be needed if there are any issues.	1		
Clean area around the caster housing and bearings. This is a common location for hair build up.	1		
Clean your wheelchair. In the event of corrosive spills or exposure to biohazards, remove contaminants immediately. See the Cleaning section in this manual for instructions.	1		
Check the rear tires, anti-tip wheels and the caster wheels for wear spots or damage. Replace immediately if needed.	1		
Check handrims to ensure they are secure and not damaged.	1		
Check that the hand grips do not rotate or pull off. Replace if needed.	1		
Check armrest receivers for loose or missing fasteners and check they are secure, adjusted properly and maintain position.	1		
Test tilt cable function and visually inspect the cable for correct routing (See the Tilt Mechanism section), harsh bends and kinks.	1		
Confirm all cables and handles release and return properly if present.	1		
Check that anti-tips are level and functional.	1		
Visually inspect the roller bearings for signs of wear or damage.		1	
Inspect the frame(s) and anti-tips for deformities, defects, cracks, dimples or bends. These could be signs of fatigue in the wheelchair which could result in a failure. Discontinue use of the wheelchair immediately and contact an authorized supplier.		1	
Check upholstery for signs of wear, fraying or holes. Replace upholstery immediately if needed.		1	
Check arm pads, cushions and back rest for damage, rips or tears.		1	
Check wheels for any loose, broke or bent spokes. Replace immediately if needed.		1	
Check that all fasteners are tight. Unless otherwise noted, fasteners should be tightened to 40 in./lbs (4.51 N*m).		1	
Verify the wheelchair rolls easily and straight.		1	
Have the wheelchair checked and adjusted by a qualified technician at your authorized supplier.			1

### V. MAINTENANCE AND CARE

## A. Maintenance Table (Continued)

#### Pressure Conversion Table

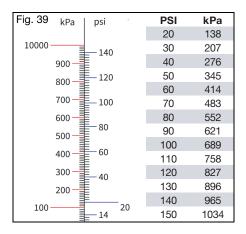

## B. Cleaning

# **△** CAUTION △

CAUTION: Washing upholstered components containing flame retardants, as indicated on the labeling of the upholstery, may reduce the flame retardants' efficacy over time. This may increase the risk of ignition when exposed to open flame or other ignition sources, which may increase the risk of injury.

#### Axles, Wheels, Tires and Moving Parts:

- 1. Clean around the axles and wheels weekly with a damp rag.
- Hair and lint will lodge in and around the caster housing and rear wheel axles. Remove with a stiff brush or pick. Take care not to damage bearing seals.

#### Painted Surfaces

- 1. Hand wash using a cloth and mild detergent.
- 2. Dry using a clean cloth or allow wheelchair to air dry.
- 3. Nonabrasive wax may be used to help preserve painted surfaces.

#### Upholstery:

- 1. Hand wash using a cloth and mild detergent.
- 2. Allow upholstery to air dry. DO NOT machine dry.

#### Plastic Components

- 1. Hand wash using a cloth and mild detergent.
- 2. Do not use solvents or aggressive cleaners as they may damage plastic components.

#### Sanitizing

- Disinfect surfaces with over the counter disinfecting sanitizer of at least 70% alcohol or wipes. Do not soak or allow pooling of cleaning solutions.
- 2. Allow sanitizer to remain on surface for at least 15 minutes and remove with aseptic cloth.

### V. MAINTENANCE AND CARE

## C. Storage

- 1. When not in use, keep your chair in a clean, dry area. Failure to do so may result in your chair rusting and/or corroding.
- If your chair has been in storage for more than two months, it should be serviced and inspected by an authorized supplier before use.

## D. Disposal

Specific waste disposal or recycling regulations may be in force locally and these should be taken into consideration when disposal arrangements are made. This may include the cleaning or de-contamination of the wheelchair before disposal.

If recycling of materials is a requirement, please refer to the following list of general materials used in the components of the wheelchair:

- Aluminum Frame, caster fork, caster mount, bearing housing, camber tube assembly, backrest mount plates, backrest frame, backrest release bar, push handles, footrest tubes, footplate, seat rails, handrim and wheel rim.
- Steel Fasteners, QR axles, caster stems, backrest release latch, wheel spokes, bearings and axle sleeve.
- Plastic Rear wheels, caster tires, push handle grips, armrest pads and tube plugs.
- Upholstery Woven polyester fabric and polyurethane foam.

If recycling of materials is desired or a requirement, such as per Directive 2012/19/EU, WEEE (Waste Electrical and Electronic Equipment) in Europe, both REAC and Mascot are compliant to WEEE and provide guidance on recycling and disposal. Proper dismantling is necessary to achieve a high proportion of reuse or recycle. Care to use proper tools and protective measures in handling are required to avoid contact with sharp edges.

Plastics marked with recycling symbols and thermoplastic parts can be recycled. Aluminum, copper and steel parts, including fasteners, may be recycled. Cables, batteries and PCB are to be disposed separately per local requirements.

Return your chair and accessories to your authorized supplier for proper disposal if you are not comfortable or able to dispose of your wheelchair properly.

### VI. TROUBLESHOOTING

## A. Symptoms and Solutions

For optimum performance, your wheelchair needs to be adjusted occasionally. The following is a list of potential symptoms you may encounter over the life of your wheelchair and the suggested solutions for each symptom. For best results when troubleshooting, try one solution at a time before proceeding to a second solution. If symptoms are not relieved or you are not confident in performing the solution, it is recommended to take the wheelchair to an authorized service center for repair.

#### Solutions:

- A Self Correct if capable or contact Authorized Distributor
- B Contact Authorized Distributor

			Symptoms								
			Chair pulls to one side	Looseness in chair	Difficulty turning	Caster Float	Caster Flutter	Squeaking, clicking or rattling	Will not tilt/ rattles when tilting	Difficulty Tilting	Chair tilts too quickly/ difficult to recover
	В	Add spacer washer between caster stem and bottom caster housing bearing on left or right side of chair.	х				х				
	Α	Ensure all tire pressures are correct and equal.	Х		Х	х					
ıns	Α	Check to make sure all fasteners are tightened appropriately, tighten if necessary.	х	Х			х			х	
Solutions	Α	Lubricate w/Teflon based lubricant between frame connections and mating parts in suspect areas.						Х			
	В	Ensure cable tilt mechanism is adjusted.							Х		
	В	Confirm caster housing are square to the ground plane.	х								
	Α	Remove caster/bearing debris.	Х	Х	_						

### VII. WARRANTY

Ki Mobility warrants the frame, cross braces, hangers and quick-release axles of this wheelchair against defects in materials and workmanship for the life of the original purchaser. All other Ki Mobility-made parts and components of this wheelchair are warranted against defects in materials and workmanship for one year from the date of first consumer purchase.

The expected life of the frame is five years.

#### **Limitations to the Warranty**

- 1. We do not warrant:
  - a. Wear items: Upholstery, tires, armrest pads, tubes, armrests and push-handle grips.
  - b. Damage resulting from neglect, misuse or from improper installation or repair.
  - c. Damage from exceeding weight limit.
- 2. This warranty is VOID if the original chair serial number tag is removed or altered.
- 3. This warranty is VOID if the original chair has been modified from its original condition and it is determined the modification resulted in failure.
- 4. This warranty applies in North America only. Check with your supplier to find out if international warranties apply.

#### Ki Mobility's Responsibility

Ki Mobility's only liability is to replace or repair, at our discretion, the covered parts. There are no other remedies, expressed or implied.

#### Your Responsibility

- a. Notify Ki Mobility, via an authorized supplier, prior to the end of the warranty period and get a return authorization (RA) for the return or repair of the covered parts.
- b. Have the supplier send the authorized return, freight pre-paid, to:

Ki Mobility

5201 Woodward Drive

Stevens Point, WI 54481

c. Pay any charges for labor to repair or install parts.

# **VIII. SPECIFICATION SHEET - LIBERTY**

Manufacturer: Ki Mobility	Maximum Occupant Mass: 113 kg, 250 lb
Address: 5201 Woodward Dr., Stevens Point, Wi 54481	Occupant Mass Group (I, II or III): II
Model: Liberty	

Disclosure Information (ISO)									
Standard Reference Measurement		Fixed or minimum value	Maximum value, if relevant	Standard Reference	Measurement	Dim. No.	Fixed or minimum value	Maximum value, if relevant	
ISO 7176-5 8.2	Overall length with leg rest (Std or SRC)	1040 mm 40.9 in	- mm - in	ISO 7176-1 11	Did anti-tip device prevent chair from tipping over?		Yes		
ISO 7176-5 8.2	Overall length with leg rest (MDC/MAC)	- mm - in	- mm - in	ISO 7176-3 7.2	Max Slope Uphill/Downhill	N/A	>7.5°	- 0	
ISO 7176-5 8.3	Overall width	740 mm 29.1 in	- mm - in	ISO 7176-3 6b	Brake Operating Force	N/A	60 N 13.5 lb	- N - Ib	
ISO 7176-5 8.4	Handgrip Height (SRC/MDC)	1010 mm 39.8 in	- mm - in	ISO 7176- 30 5.10	Lever operating force (tilt/recline)	N/A	- N - lb	- N - lb	
ISO 7176-5 8.5	Folded Length (SRC/MDC)	745 mm 29.3 in	- mm - in	ISO 7176- 30 8	Reclining back adjustment force	N/A	- N - lb	- N - Ib	
ISO 7176-5 8.6	Folded Width (SRC/MDC)	410 mm 16.1 in	- mm - in	ISO 7176-7 7.3.2	Seat plane angle	(1)	0.9°	20.2°	
ISO 7176-5 8.7	Folded Height (SRC/MDC)	715 mm 28.1 in	- mm - in	ISO 7176-7 7.3.3	Effective seat depth	(2)	485 mm 19.1 in	- mm - in	
ISO 7176-5 8.8	Rising	38 mm 1.5 in	- mm - in	ISO 7176-7 7.3.5	Effective seat width	(4)	450 mm 17.7 in	- mm - in	
ISO 7176-5 8.9	Total Mass	23 kg 51 lb	- kg - lb	ISO 7176-7 7.3.6	Seat surface height at front	(5)	450 mm 17.7 in	- mm - in	
ISO 7176-5 8.10	Mass of the heaviest part	- kg - lb	- kg - lb	ISO 7176-7 7.3.7	Backrest angle	(6)	9.1°	28°	
ISO 7176-5 8.13	Turning Radius (SRC/MDC)	755 mm 29.7 in	- mm - in	ISO 7176-7 7.3.8	Backrest Height	(7)	520 mm 20.5 in	- mm - in	
ISO 7176-5 8.15	Required width of angled corridor (SRC/MDC)	- mm - in	- mm - in	ISO 7176-7 7.3.12	Footrest to seat distance	(11)	450 mm 17.7 in	- mm - in	
ISO 7176-5 8.16	Required doorway entry depth (SRC/MDC)	- mm - in	- mm - in	ISO 7176-7 7.3.16	Leg to seat surface angle	(15)	70°	- °	
ISO 7176-5 8.17	Required corridor width for side opening (SRC/MDC)	- mm - in	- mm - in	ISO 7176-7 7.3.17	Armrest to seat distance	(16)	200 mm 7.9 in	- mm - in	
ISO 7176-1 8	Static stability downhill	>12°	_ °	ISO 7176-7 7.3.18	Front armrest to backrest distance	(17)	320 mm 12.6 in	- mm - in	
ISO 7176-1 9	Static stability uphill	>10.5°	>12°	ISO 7176-7 7.3.23	Front location of armrest structure	(22)	- mm - in	- mm - in	
ISO 7176-1 10	Static stability sideways	>10.5°	- °	ISO 7176-7 7.3.24	Handrim diameter	(23)	520 mm 20.5 in	- mm - in	
ISO 7176-1 11	Static stability with anti-tips	>10°	- °	ISO 7176-7 7.3.26	Horizontal location of axle	(25)	- mm - in	- mm - in	

This wheelchair conforms to the following standards:		No	N/A
<ul> <li>a) Requirements &amp; test methods for static, impact and fatigue strengths (ISO 7176-8 and ISO 7176-30 as applicable)</li> </ul>	Х		
irements for resistance to ignition in accordance with ISO 7176-16			

See General Warnings section of manual for further information on flammability.